Stepper SC9100 - S/N HSH100000
General Assembly

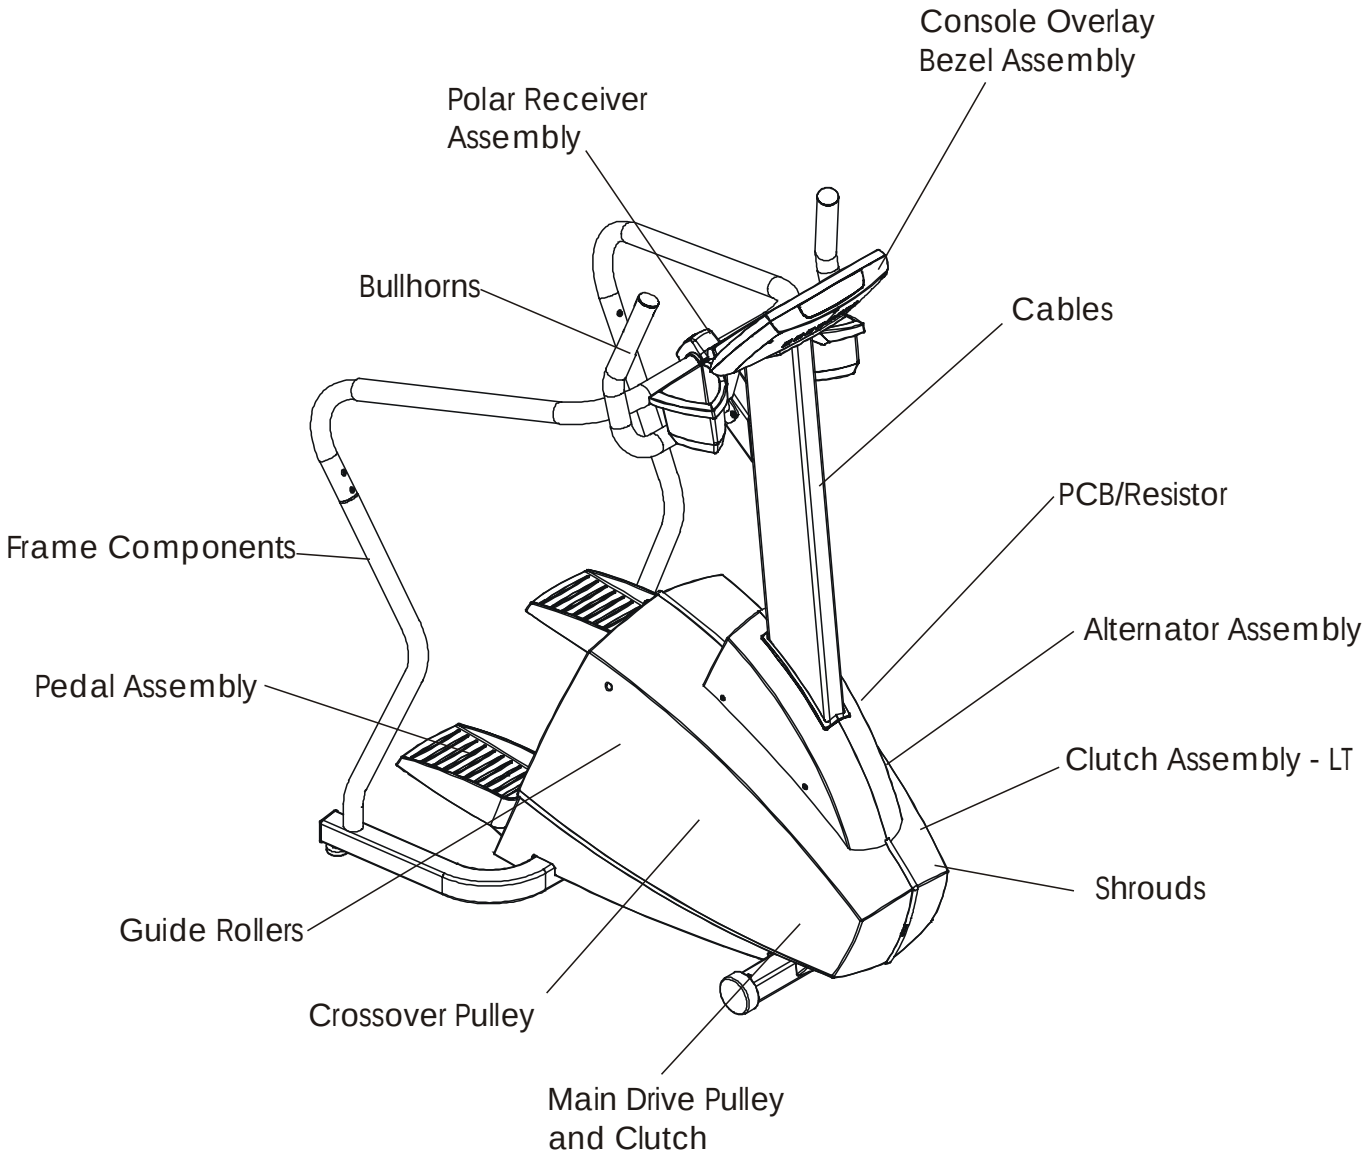

Operation Manual	**M051-00K20-A311**
Service Manual	**M051-00K47-A013**
Hardware Bag	**AK47-00050-0000**
KIT:SERV; NETWORK;	**GK63-00002-0003**

Stepper SC9100
Console Overlay Bezel Assembly

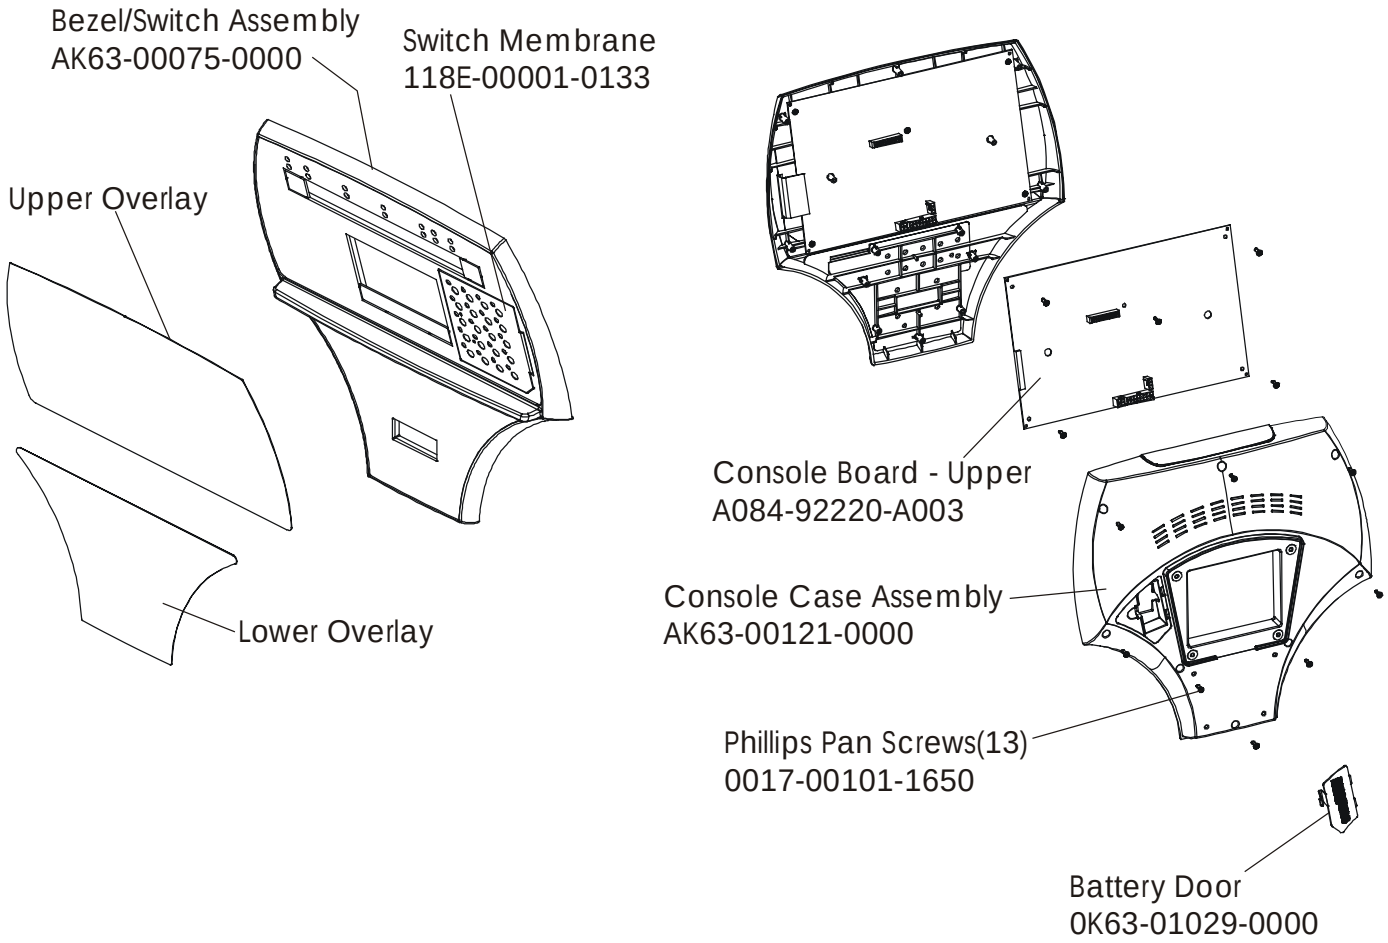

Console Assembly	Overlay Bezel	Upper Overlay	Lower Overlay
AK47-00016-0001 Eng Met	AK47-00013-0001 Eng Met	0K47-01007-0001 Eng Met	0K47-01009-0001 Eng Met
AK47-00016-0003 Ger Met	AK47-00013-0003 Ger Met	0K47-01007-0003 Ger Met	0K47-01009-0003 Ger Met
AK47-00016-0004 Spn Met	AK47-00013-0004 Spn Met	0K47-01007-0004 Spn Met	0K47-01009-0004 Spn Met
AK47-00016-0006 Jap Met	AK47-00013-0006 Jap Met	0K47-01007-0006 Jap Met	0K47-01009-0006 Jap Met
AK47-00016-0007 Frn Met	AK47-00013-0007 Frn Met	0K47-01007-0007 Frn Met	0K47-01009-0007 Frn Met
AK47-00016-0008 Itl Met	AK47-00013-0008 Itl Met	0K47-01007-0008 Itl Met	0K47-01009-0008 Itl Met
AK47-00016-0009 Dut Met	AK47-00013-0009 Dut Met	0K47-01007-0009 Dut Met	0K47-01009-0009 Dut Met
AK47-00016-0010 Por Met	AK47-00013-0010 Por Met	0K47-01007-0010 Por Met	0K47-01009-0010 Por Met

Stepper SC9100
Frame Components

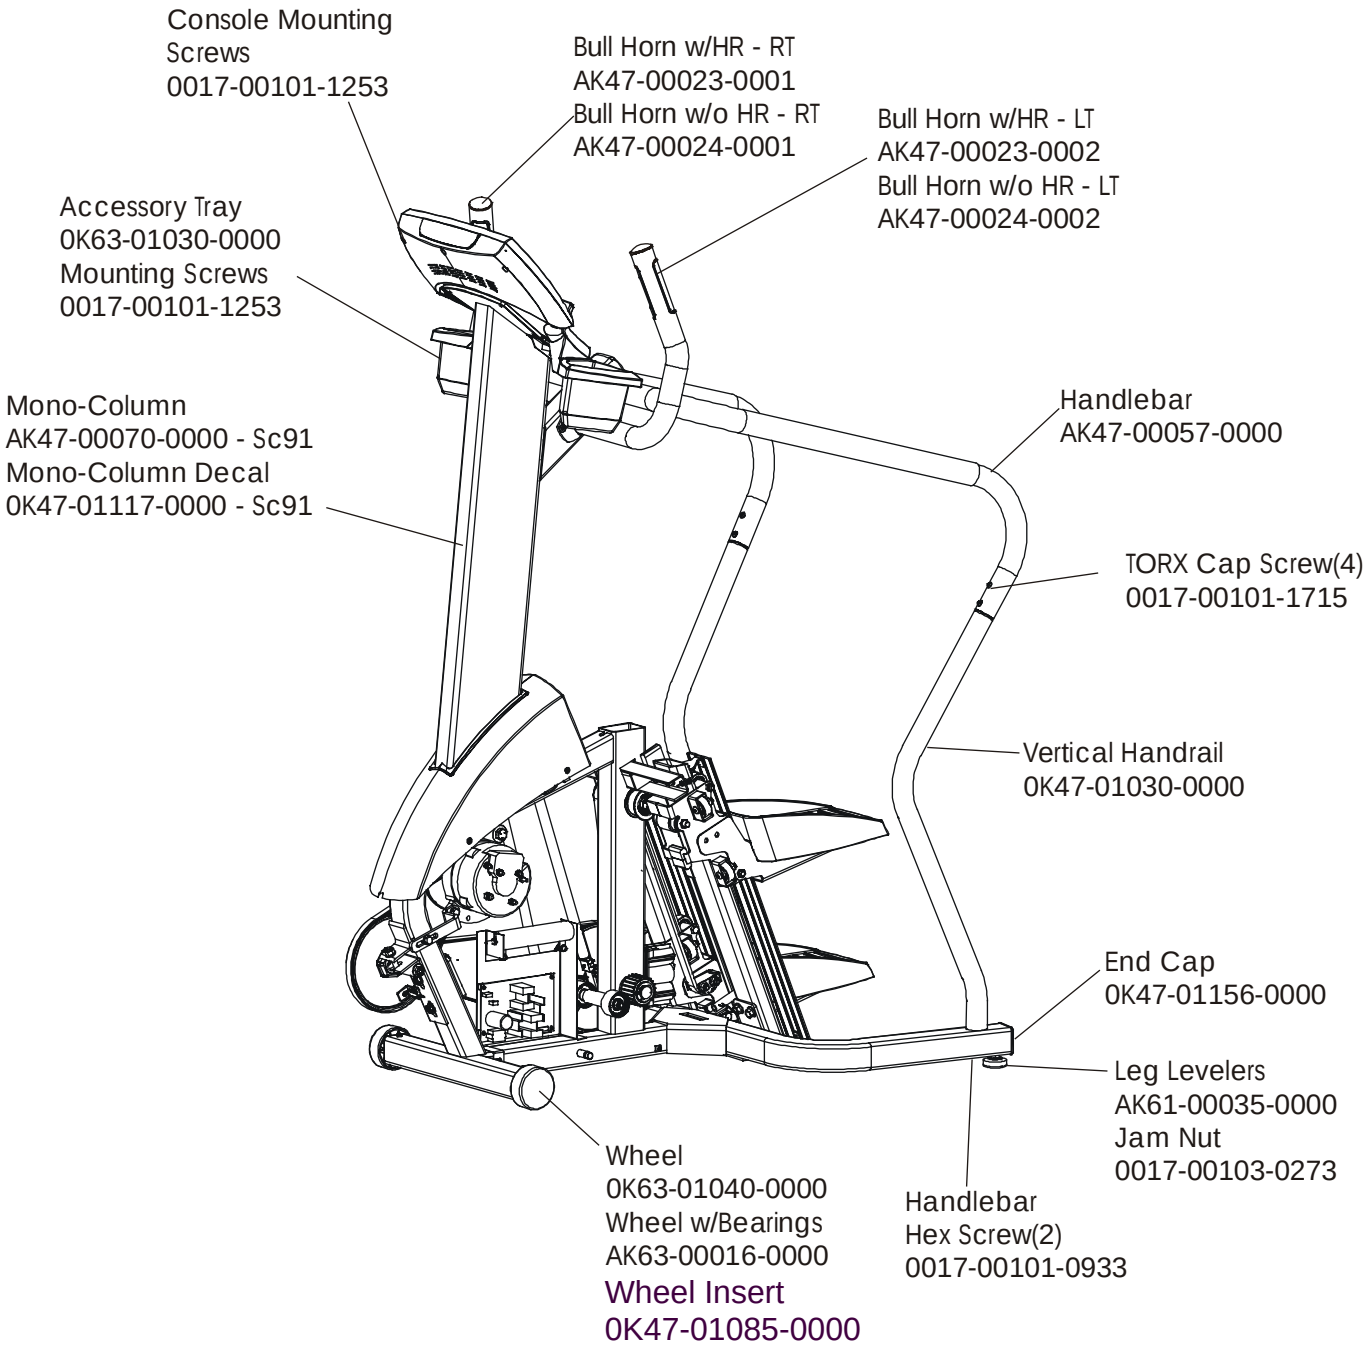

Stepper SC9100
Shrouds

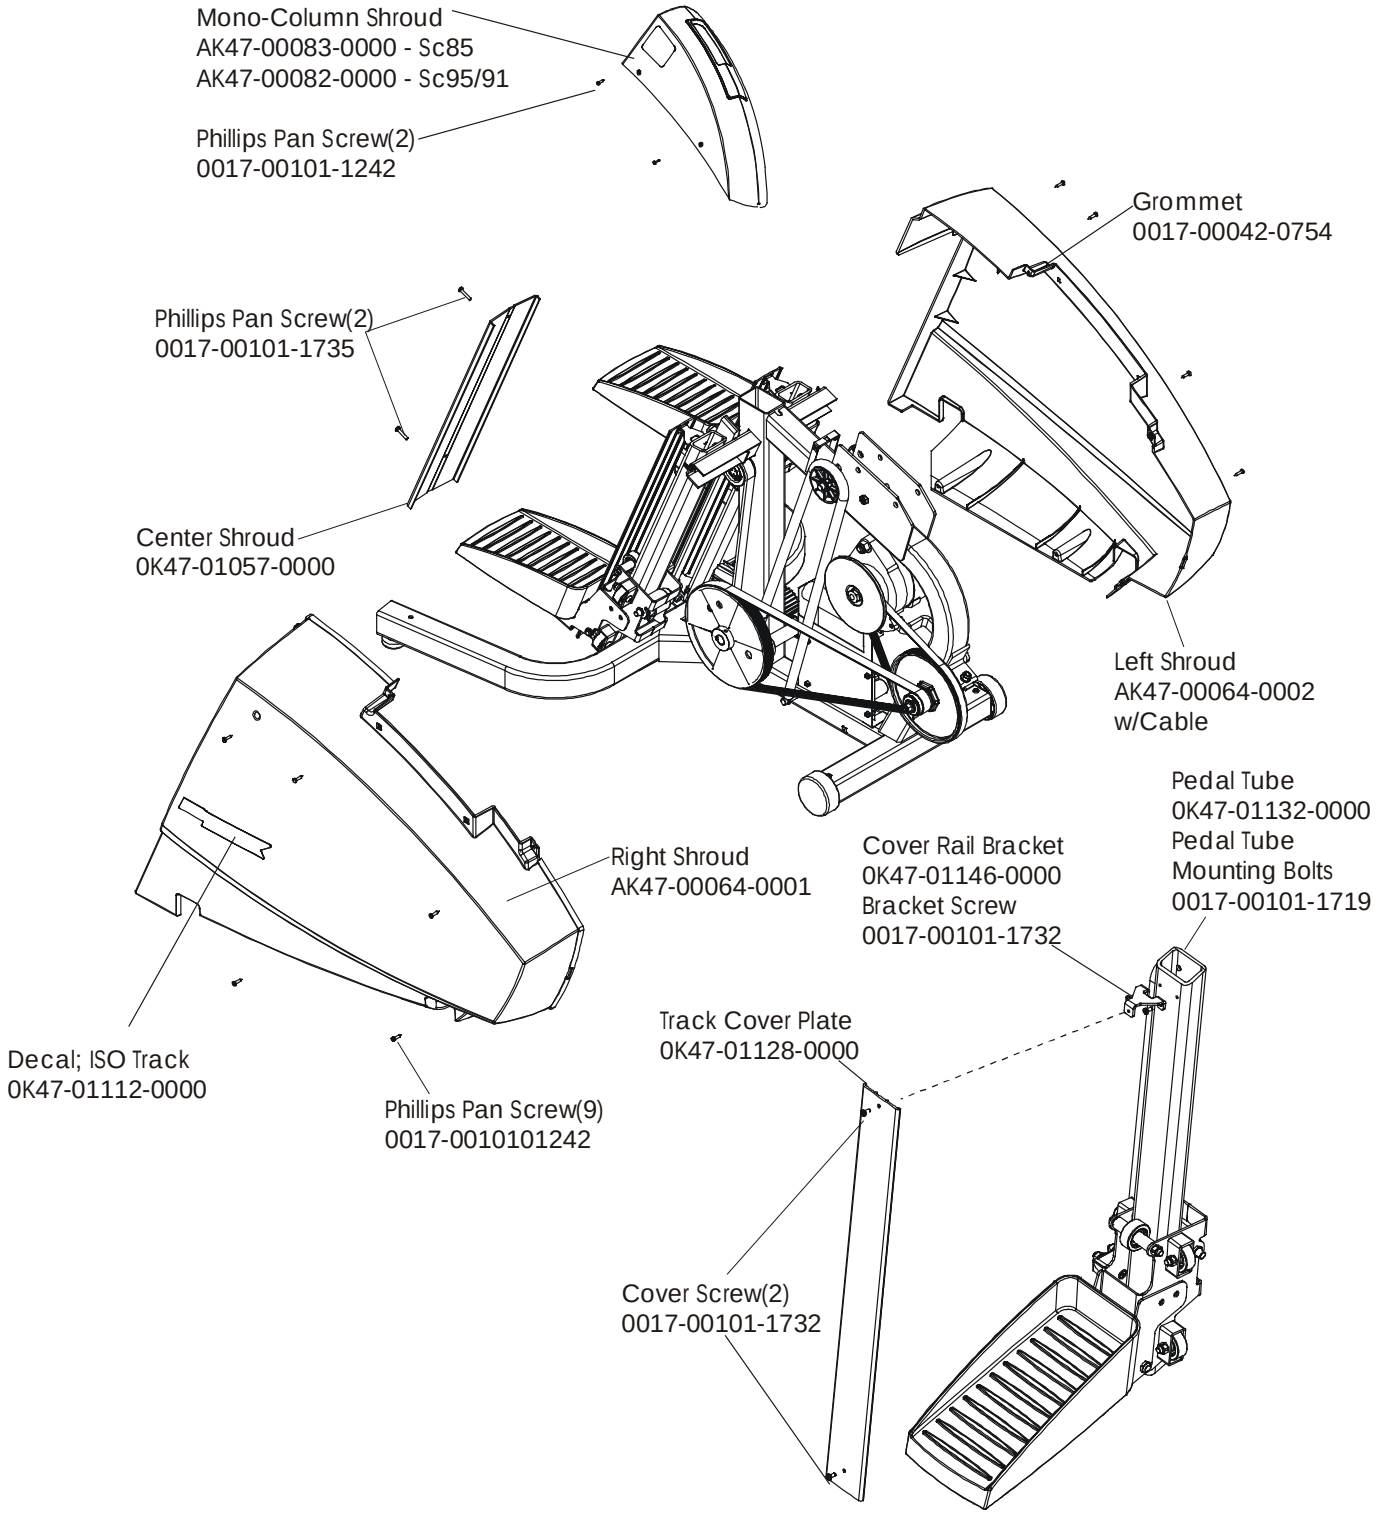

Stepper SC9100
Pedal Assembly

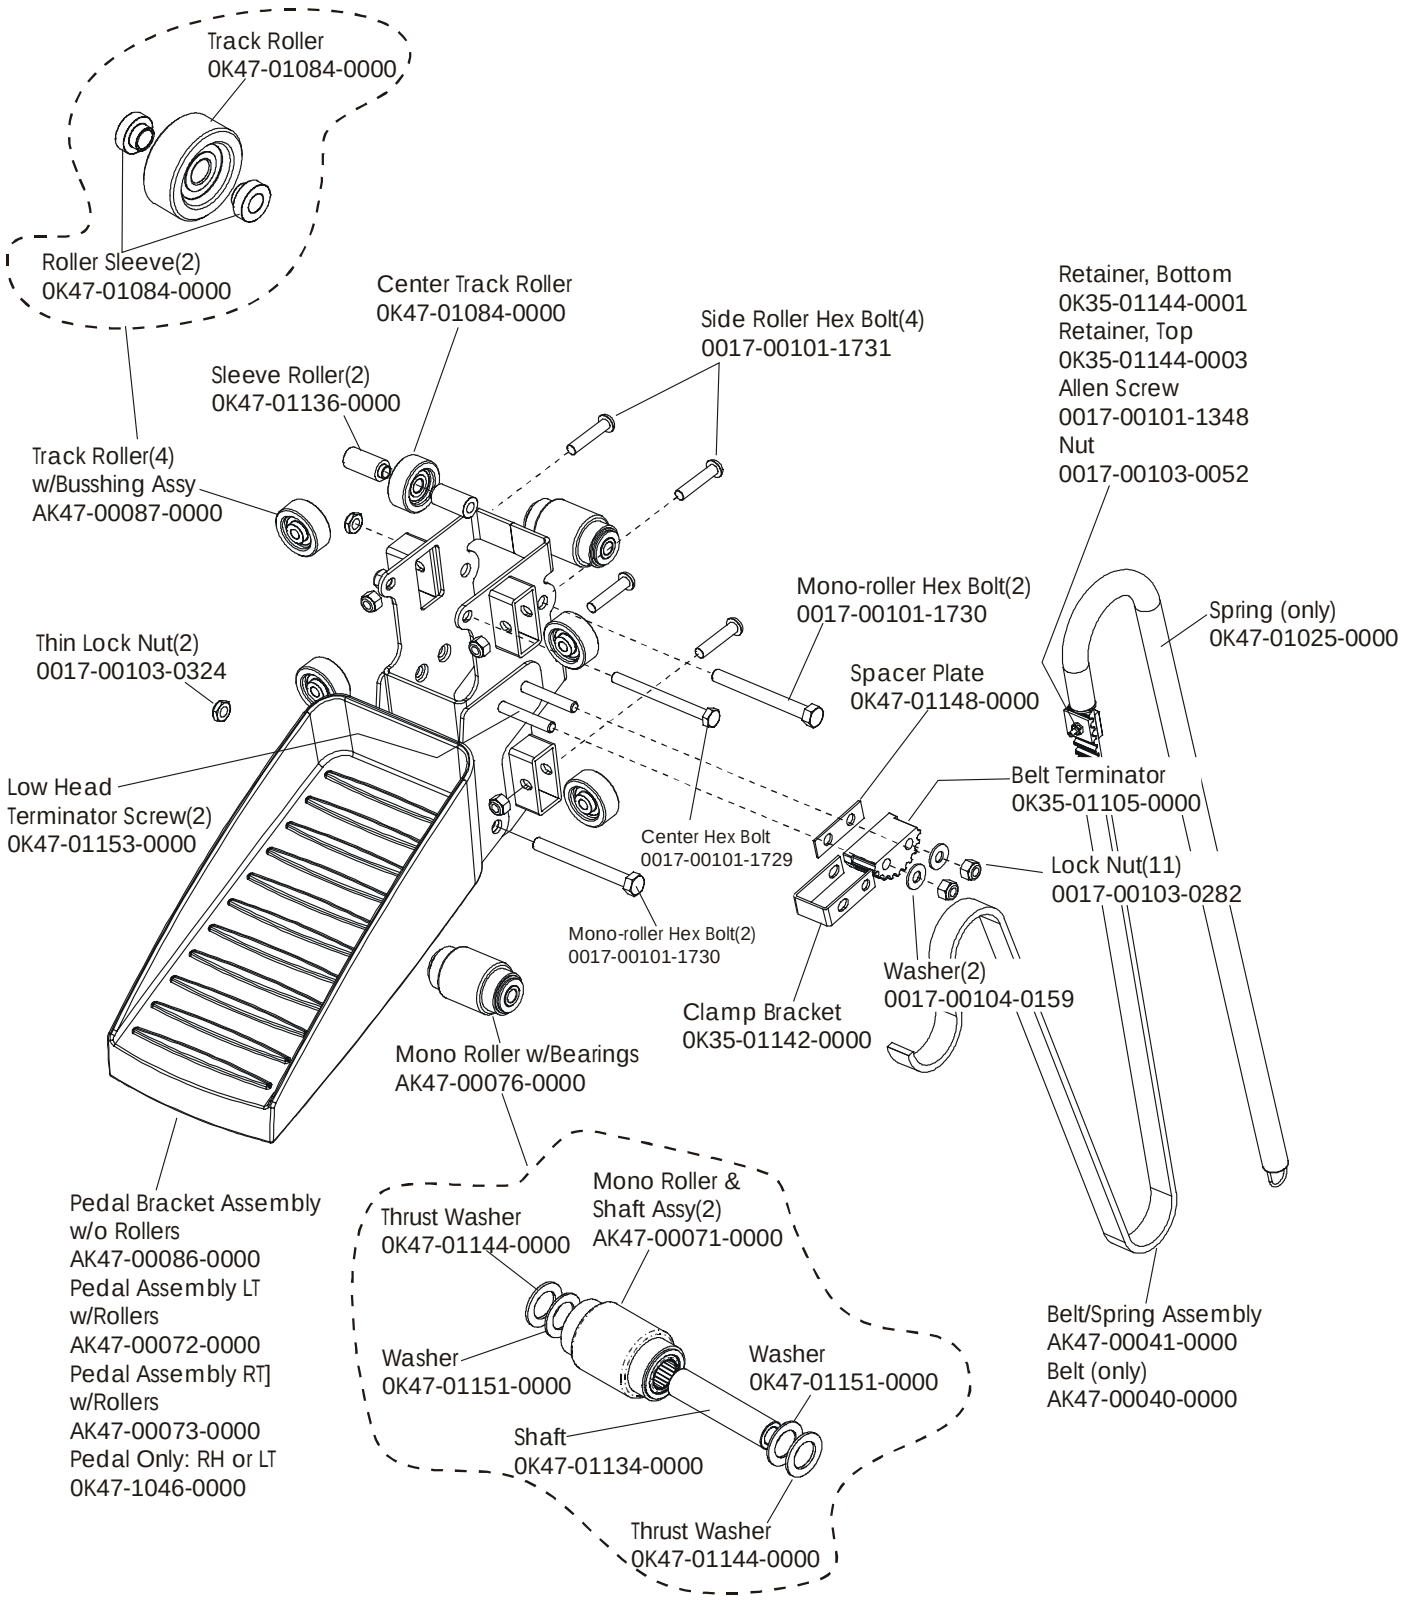

Stepper SC9100
Main Drive Pulley and Clutch

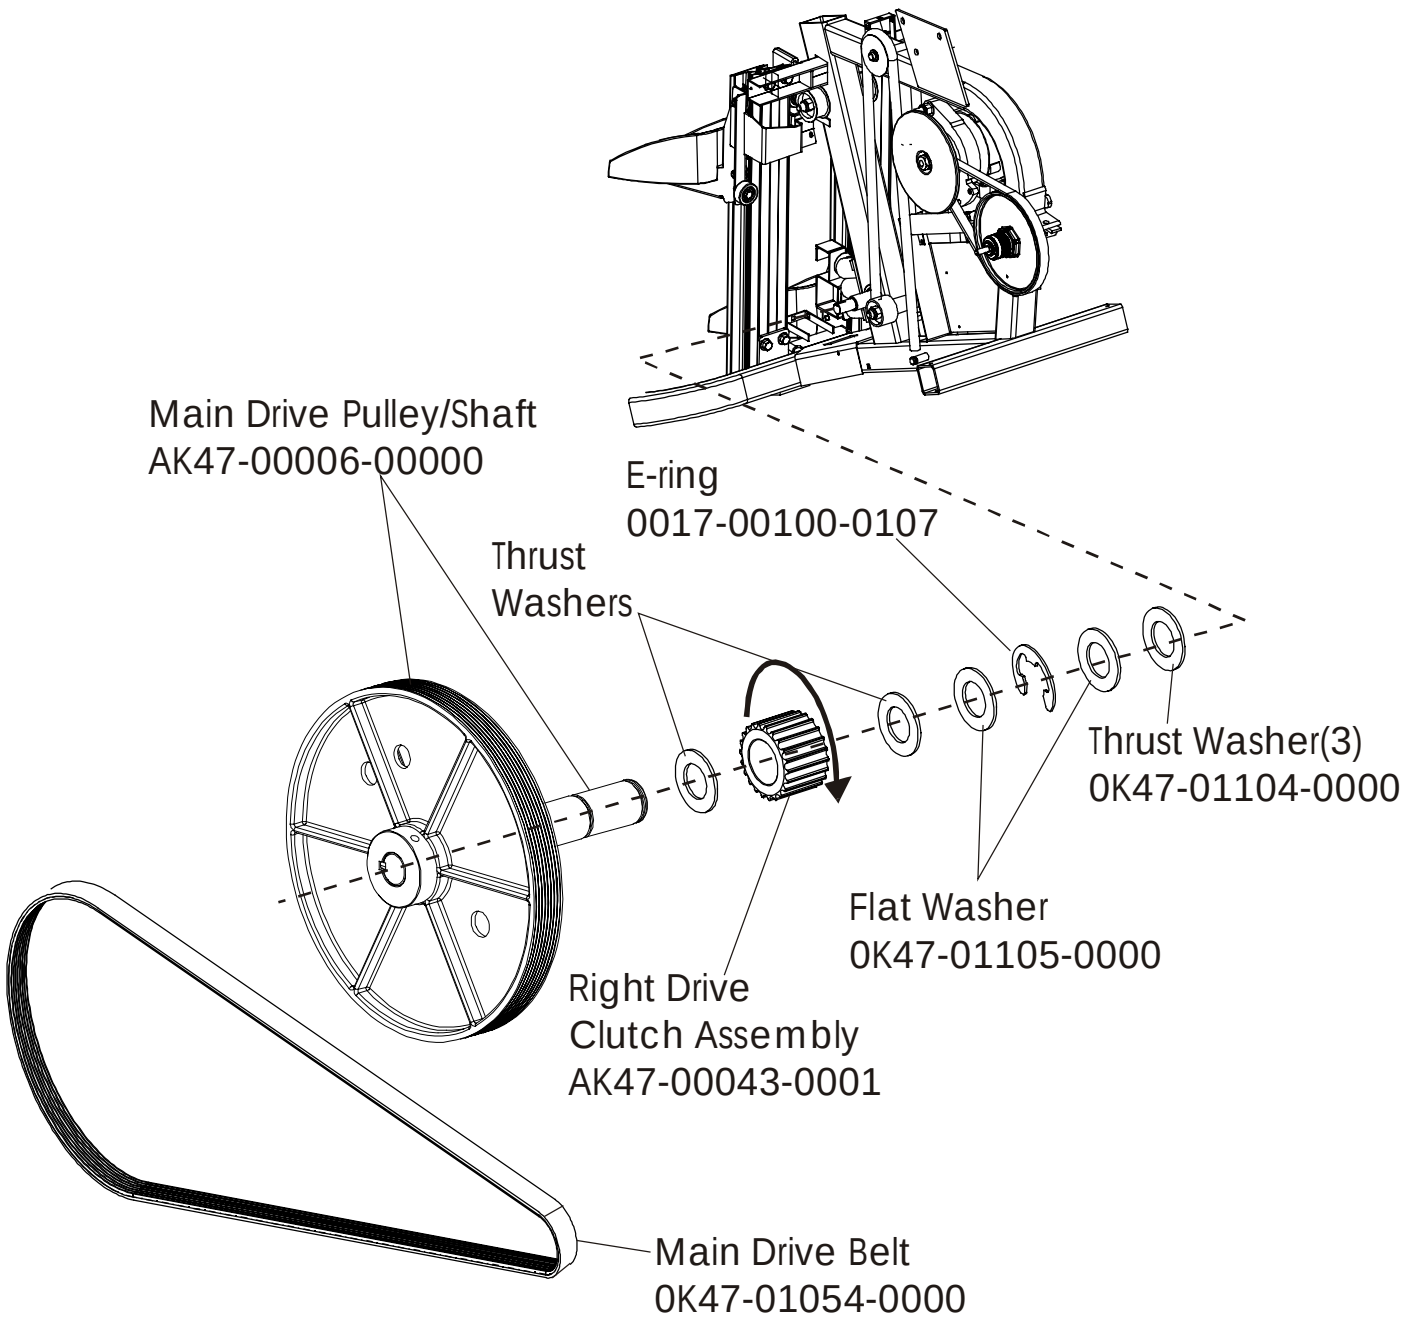

Stepper SC9100
Clutch Assembly - LT

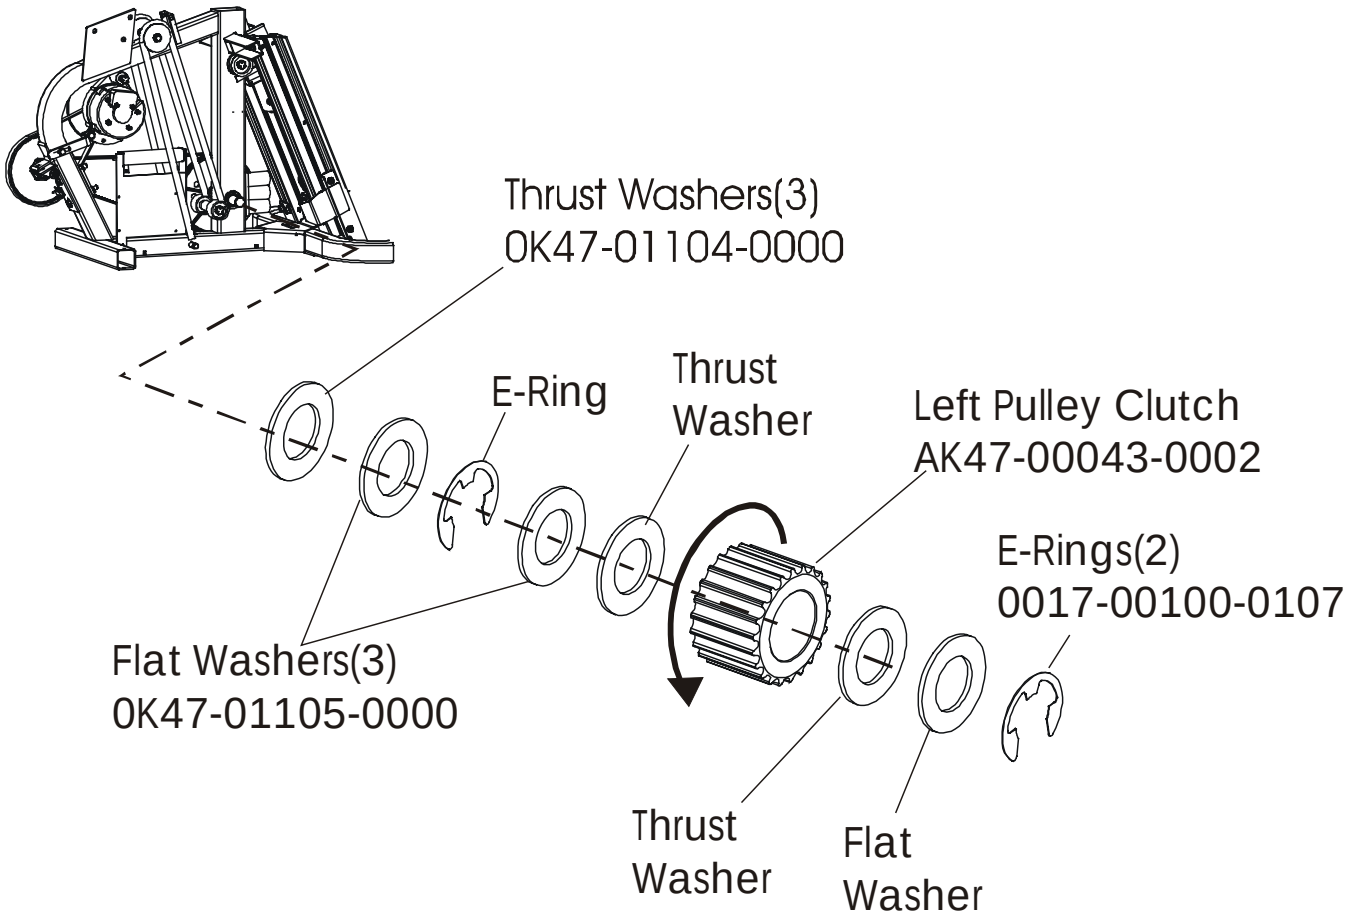

Stepper SC9100
Crossover Pulley Assembly

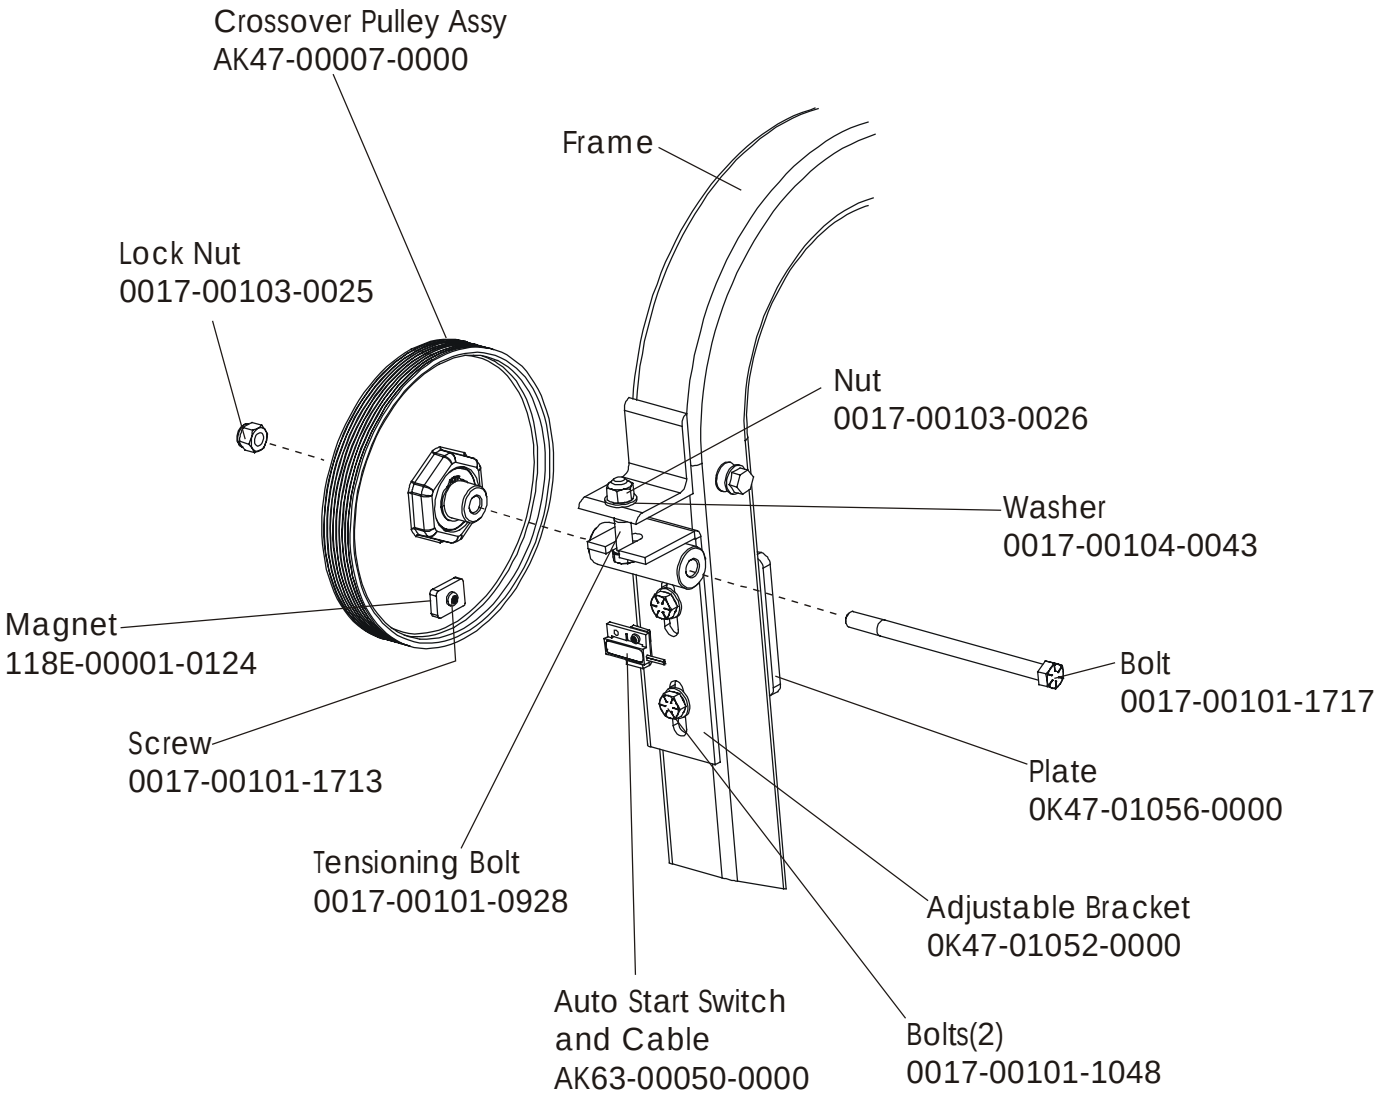

Stepper SC9100
Alternator Assembly

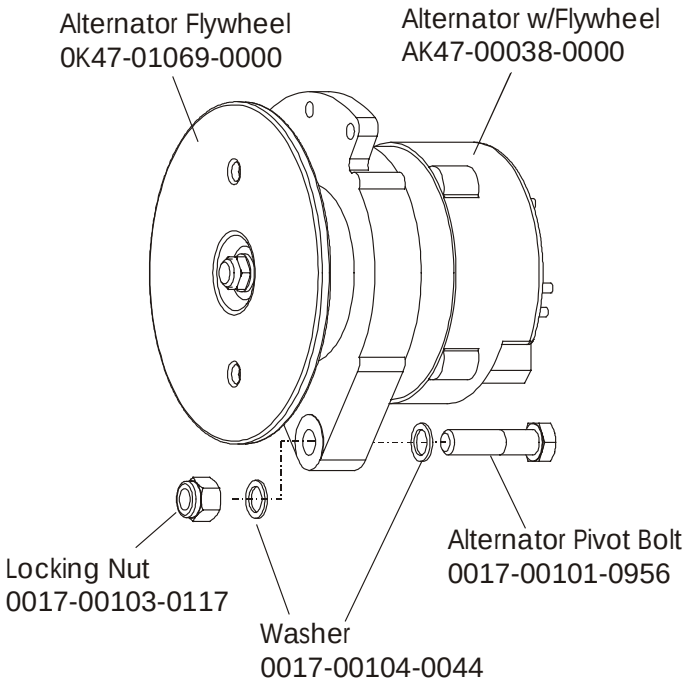

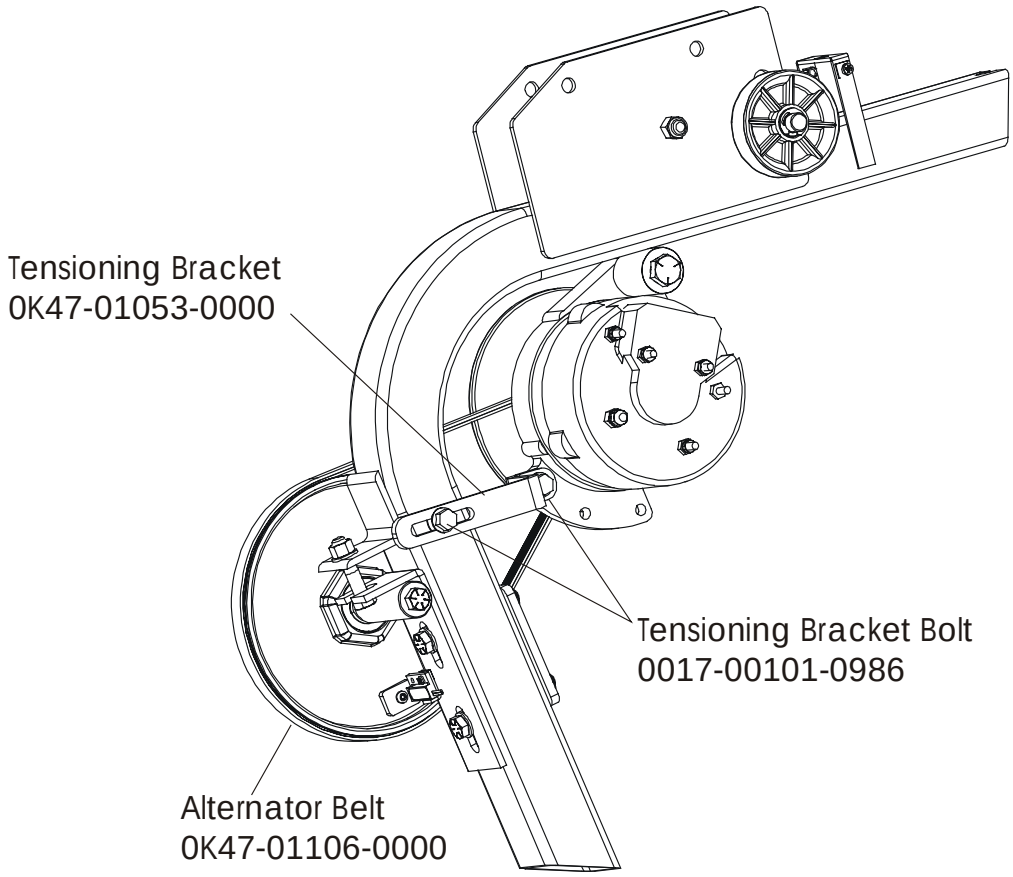

Stepper SC9100
Guide Rollers

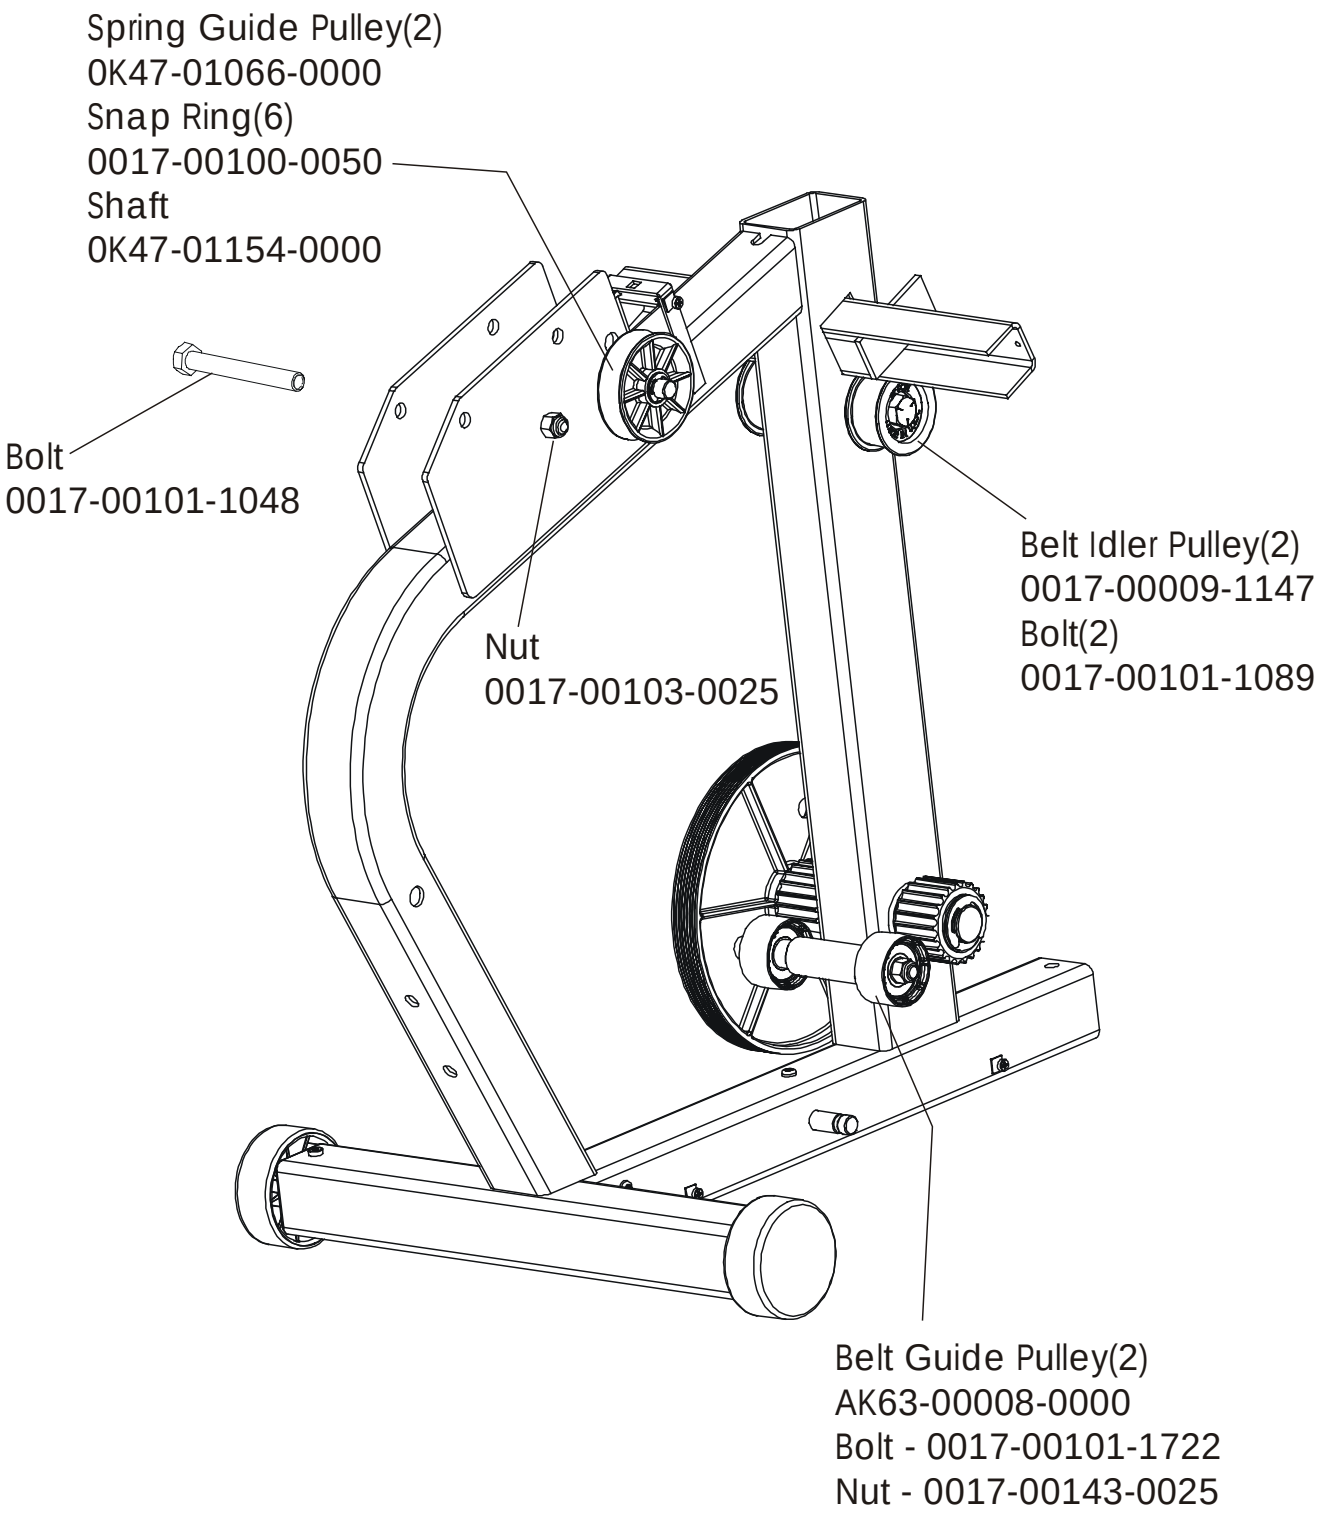

Stepper SC9100
PCB and Resistor

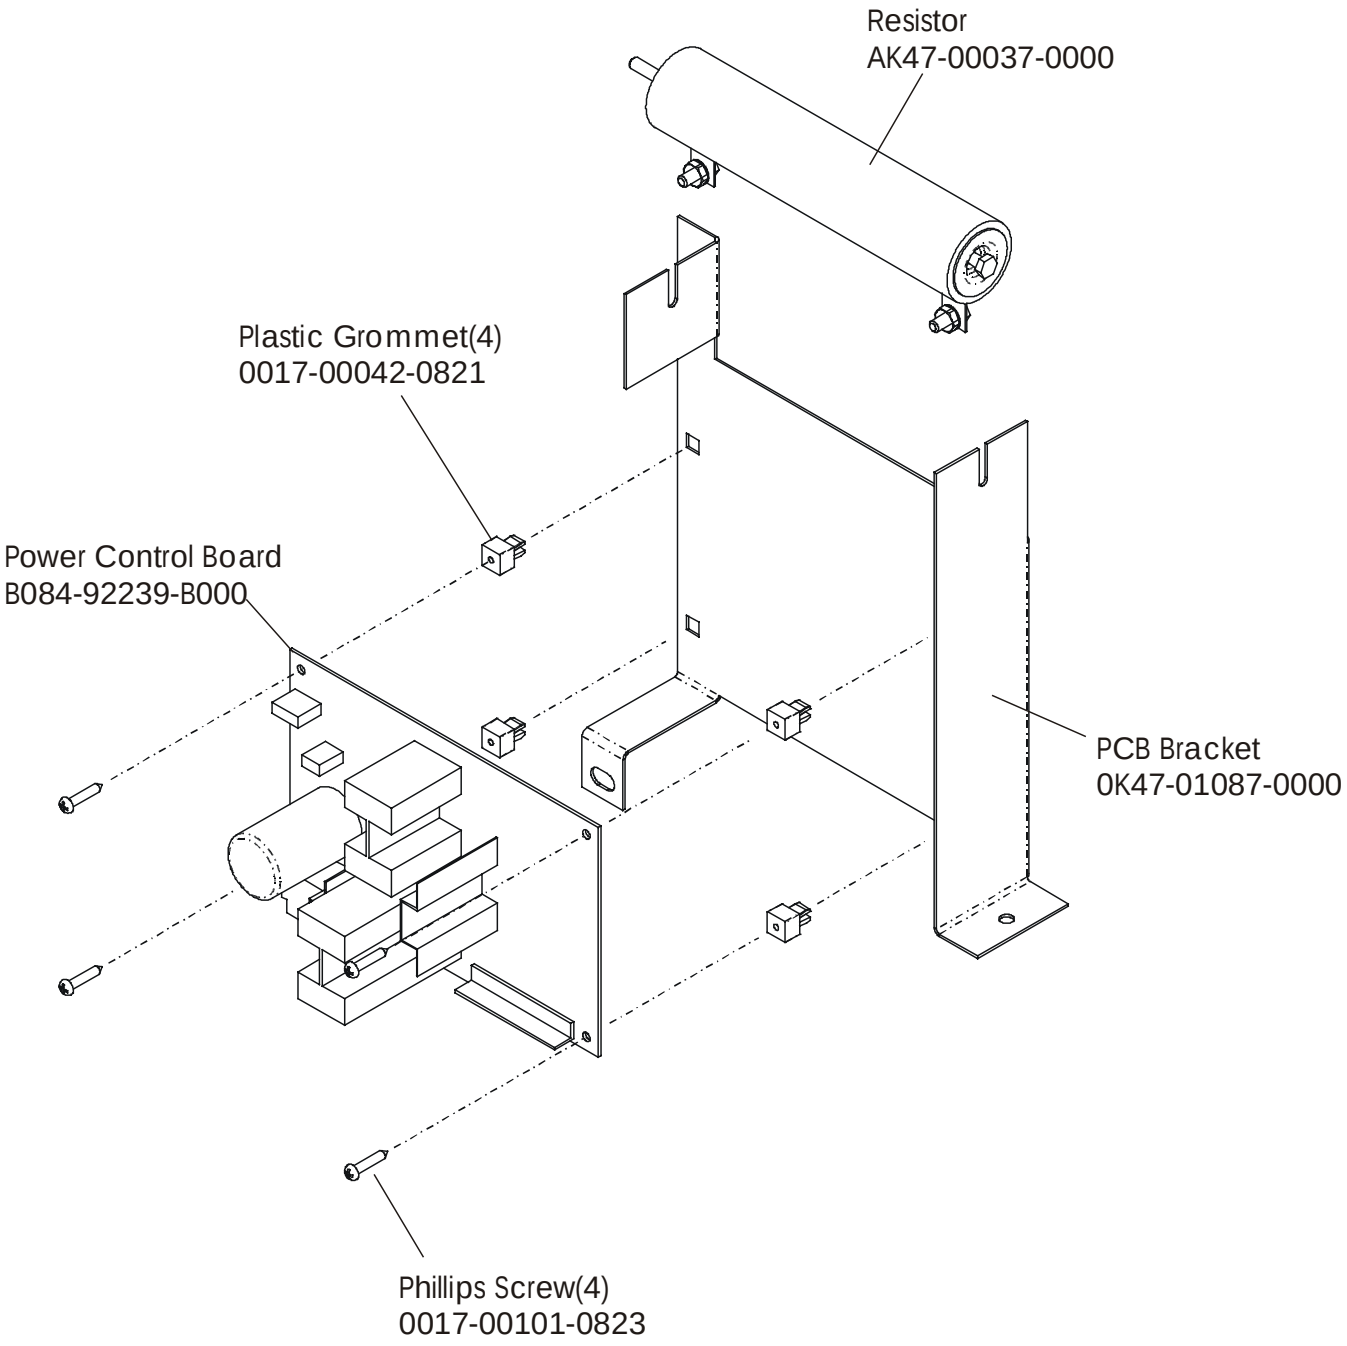

Stepper SC9100
Polar Receiver Assembly

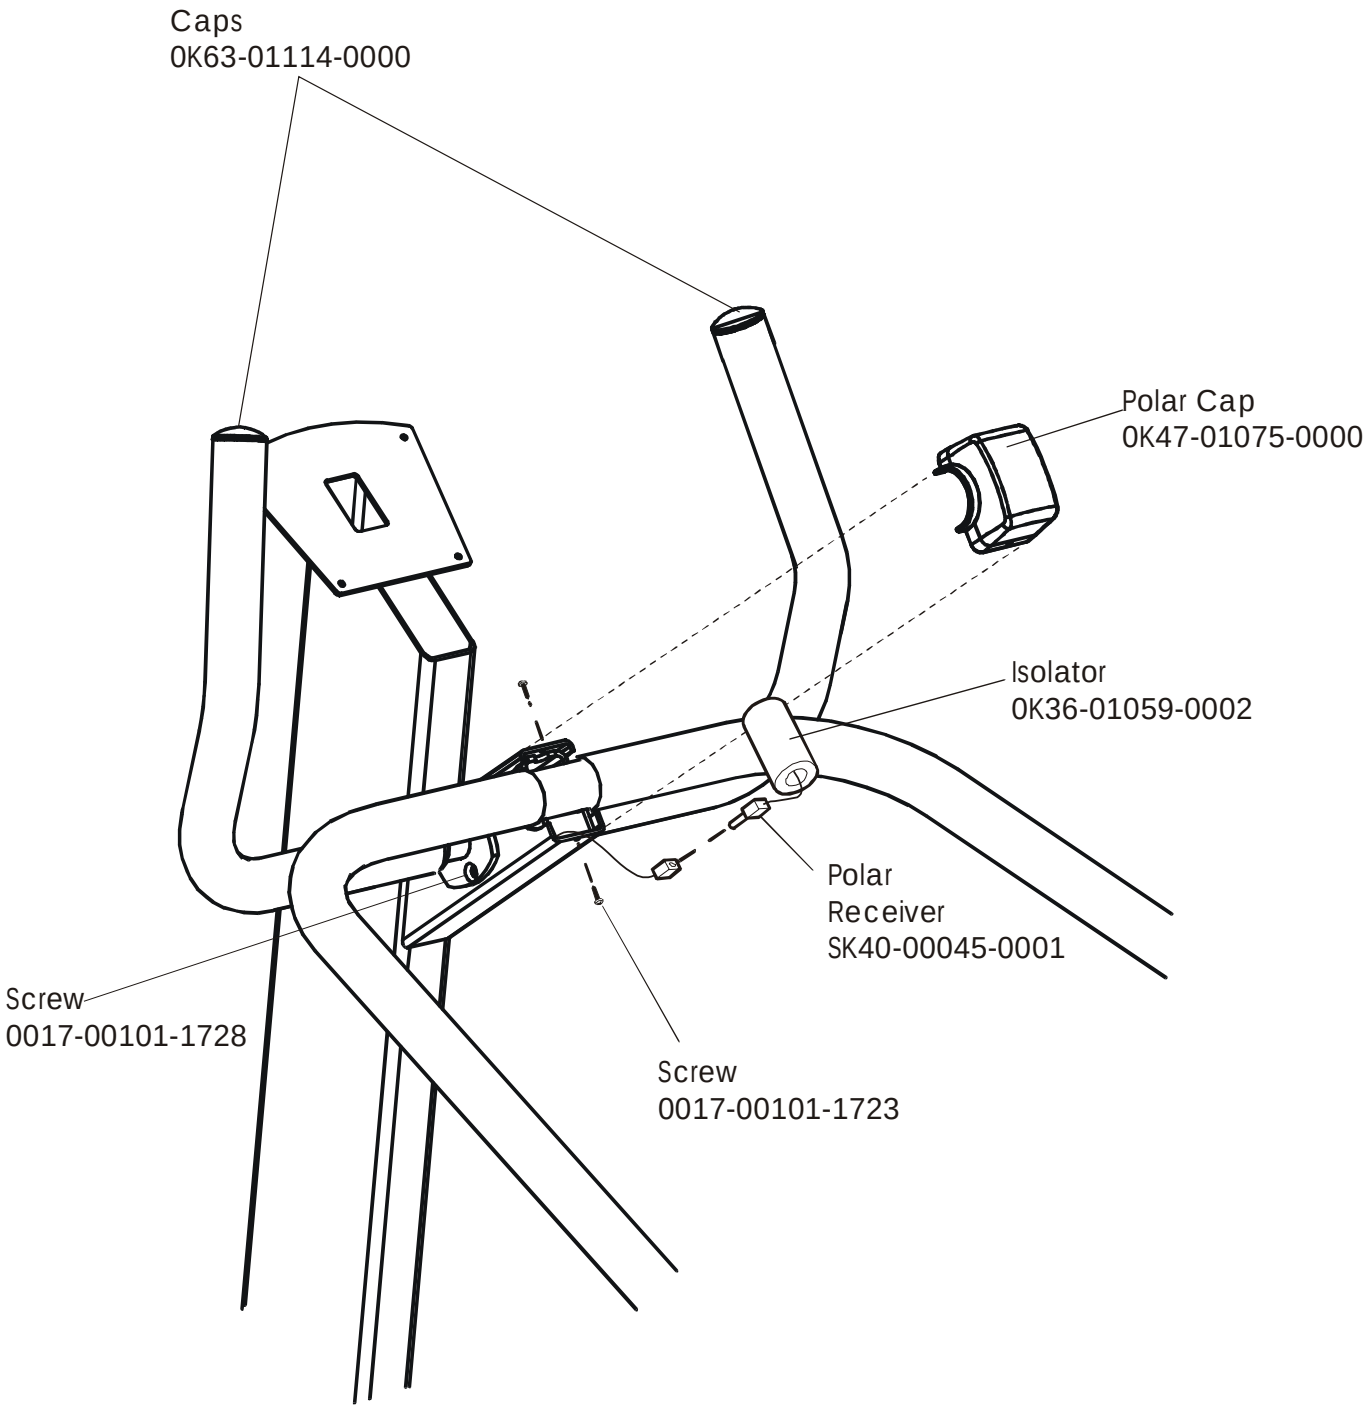

Stepper SC9100
Cables

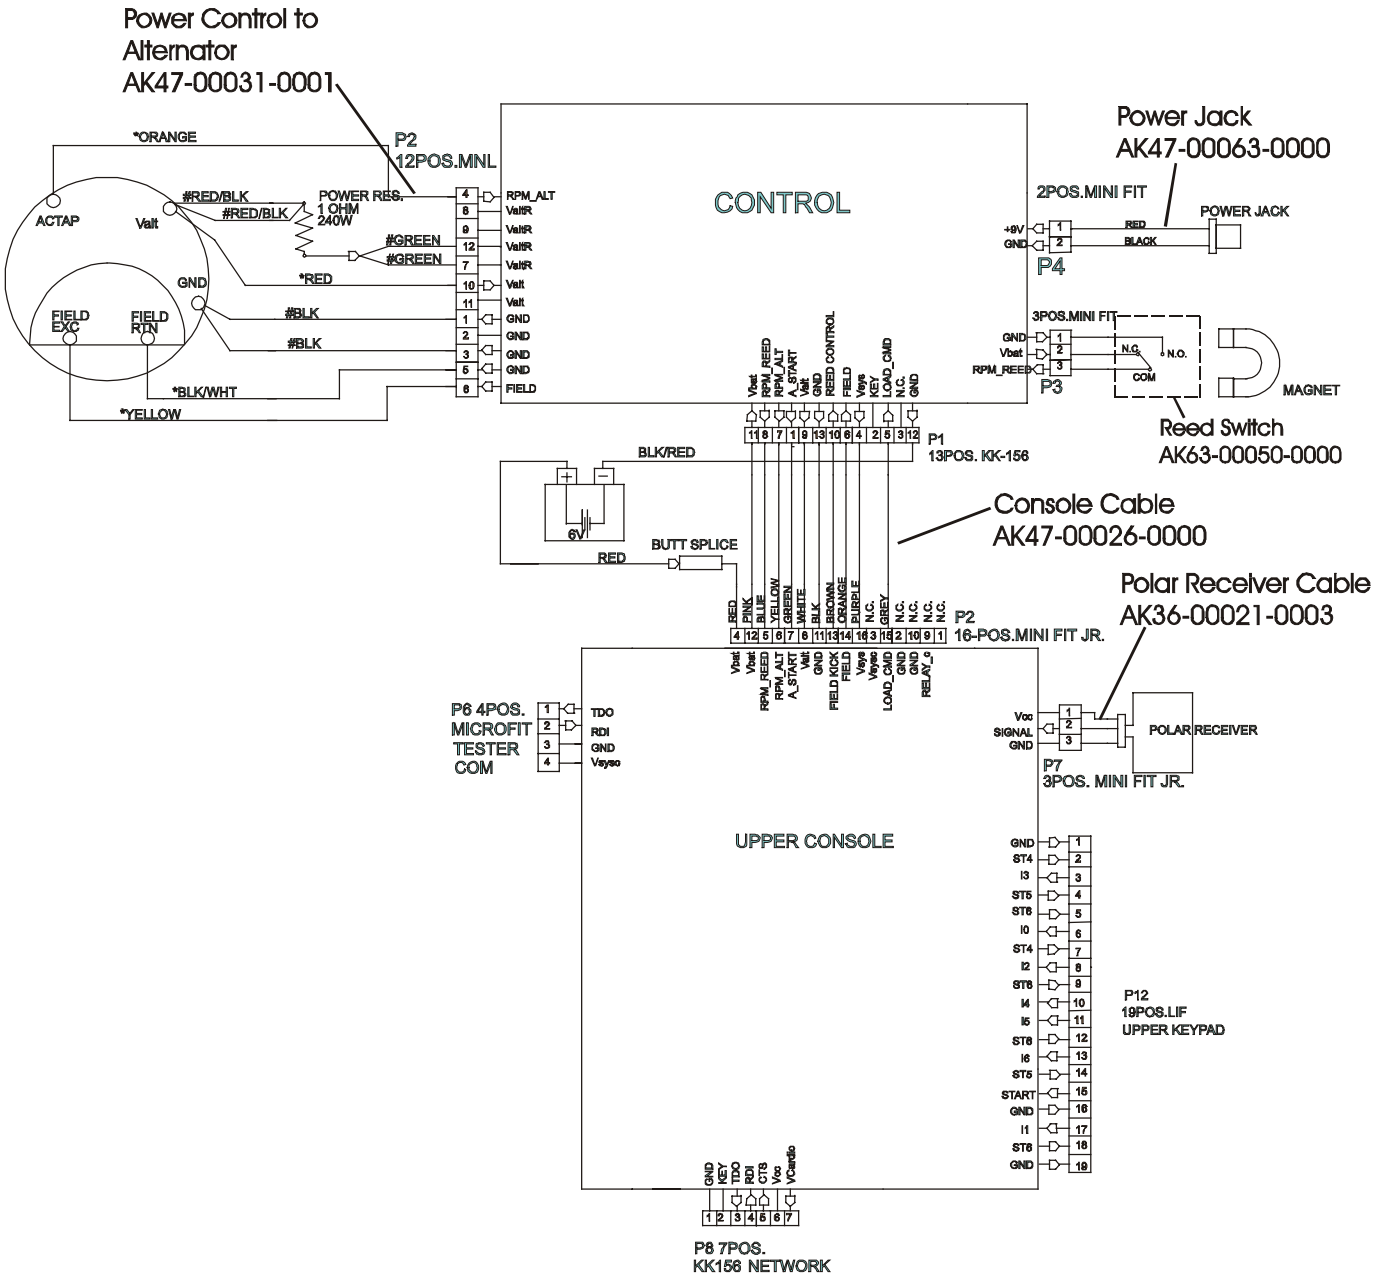

Description	Part Number
Domestic 120/60 Battery Charge w/Cord	118E-00001-0148
Universal Battery Charger w/o Line Cord	118E-00001-0147
Line Cord 220V/60Hz	0017-00003-0704
Line Cord 100V/50Hz	
Line Cord 240+	0017-00003-0918
Line Cord 220V/50Hz	0017-00003-0691
Line Cord 200V/50Hz	
Line Cord 230V/50Hz	